

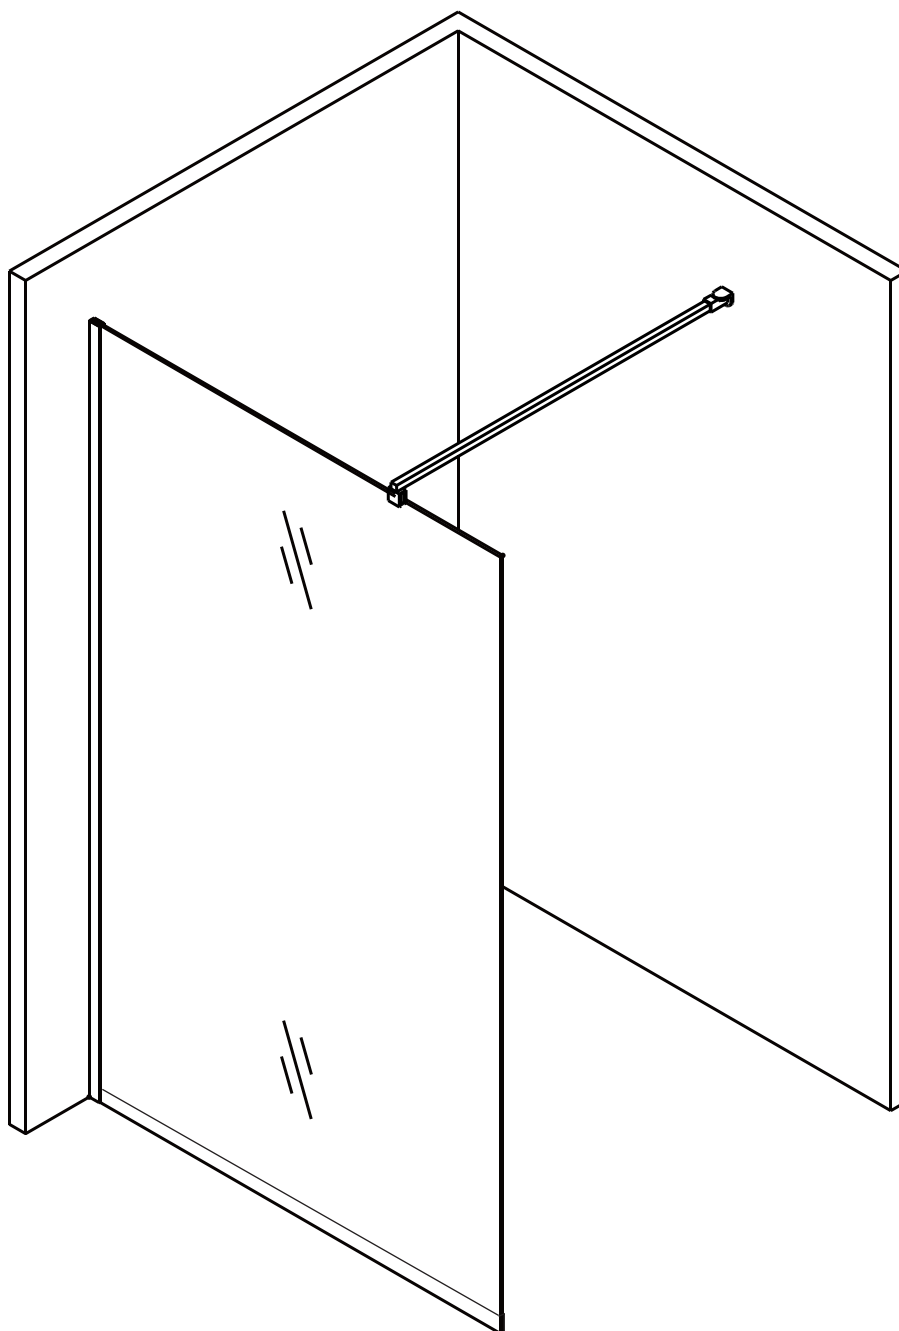
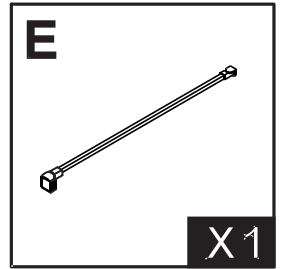
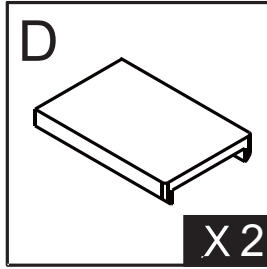
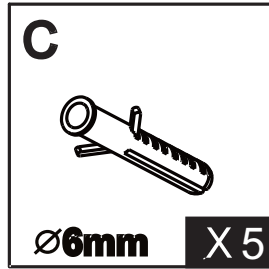
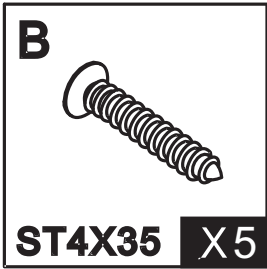








Руководство по монтажу душевых перегородок AM.PM Func

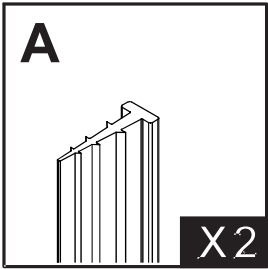


W84WI-80-200MT
W84WI-80-200BT
W84WI-90-200MT
W84WI-90-200BT
W84WI-100-200MT
W84WI-100-200BT

W84WI-110-200MT
W84WI-110-200BT
W84WI-120-200MT
W84WI-120-200BT

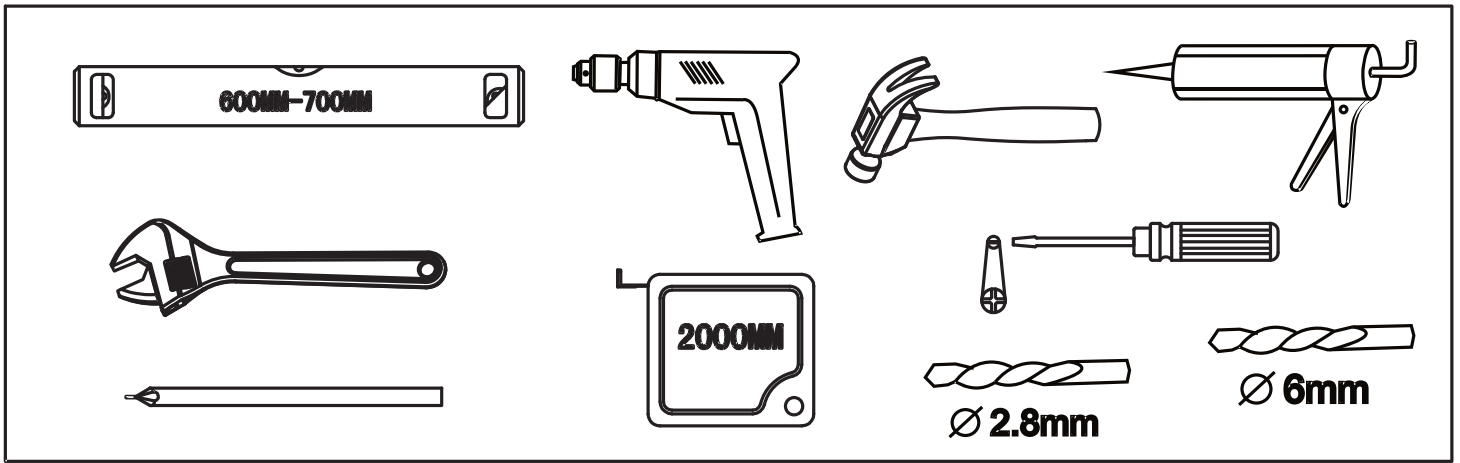

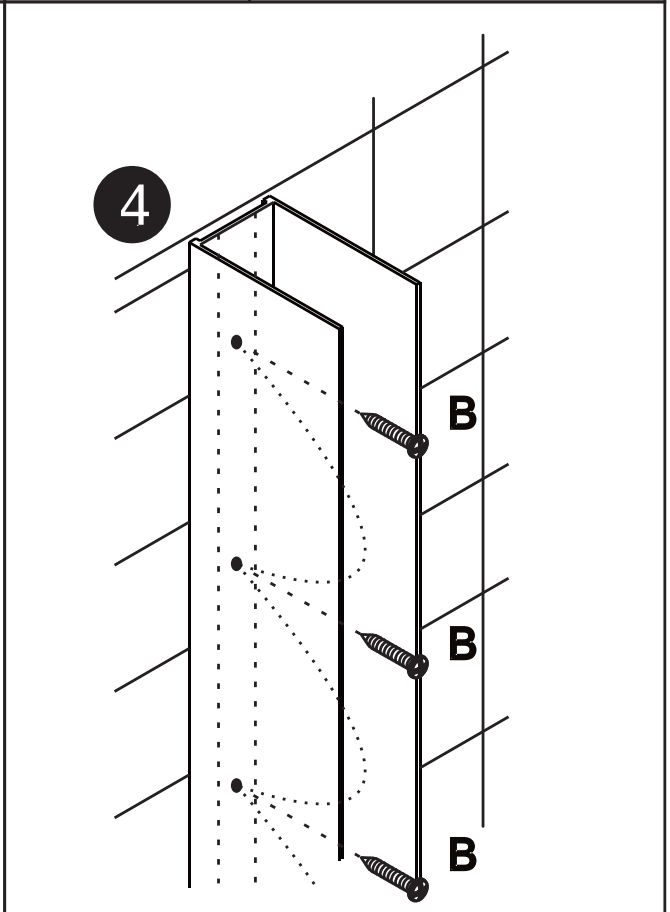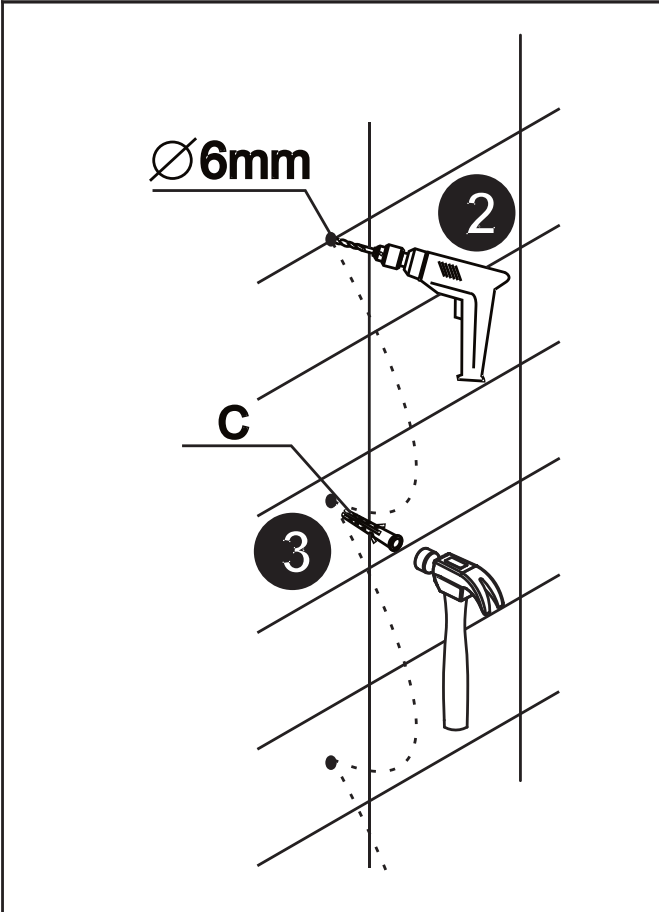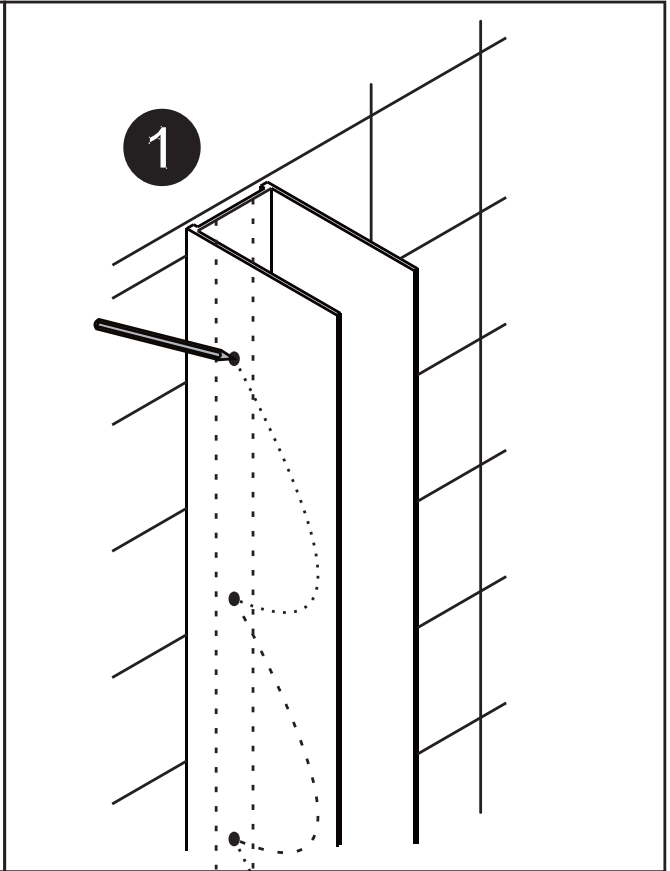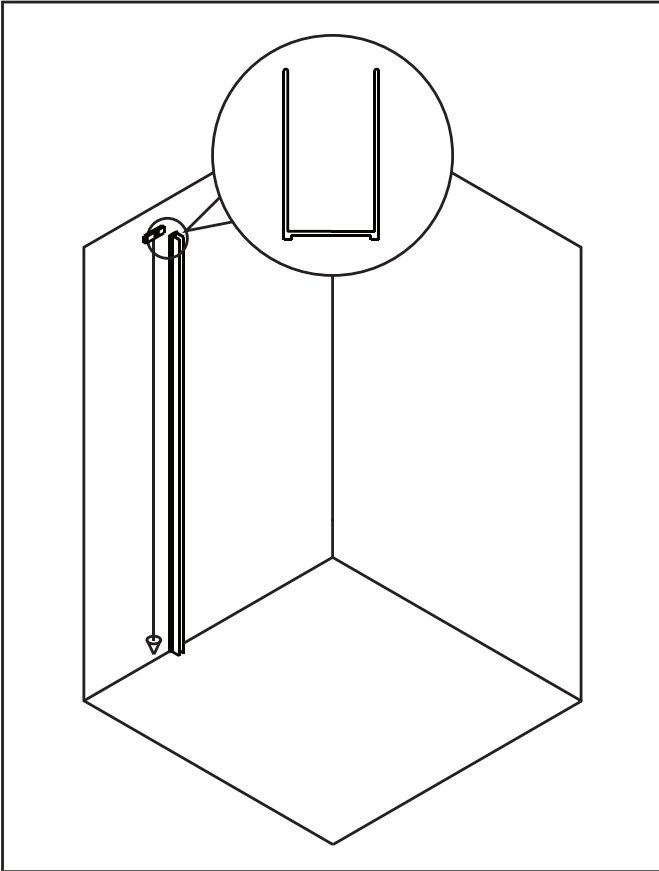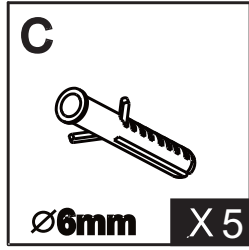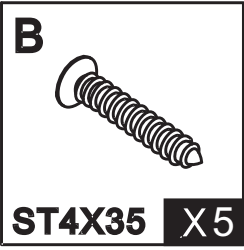

A



X2

